

# I ADJUSTMENT/SETTING

## 5. SERVICE MODE

### 5.16 ORU-M Setting

#### 5.16.2 ORU-M Life Threshold Setting

##### (1) Usage

Set whether to display the ORU-M object unit in the ORU-M mode by the life value. When the ORU-M object unit is set to "Enable", the units whose life value reaches the display threshold setting are displayed in the ORU-M mode.

##### Note

- ORU-M has to be enabled to select this setting. (The default is disabled.) To enable ORU-M, set DIPSW15-0: 1.

##### (2) Procedure

1. "Service Mode menu screen"  
Press [15 ORU-M Setting].
2. "ORU-M Setting screen"  
Press [02 ORU-M Life Threshold Setting].
3. "ORU-M Life Threshold Setting screen"  
Enter a value through the numeric buttons and press [<<SET].
  - 1 step = 1%

##### Note

- Default is 0%.