

I ADJUSTMENT/SETTING

5. SERVICE MODE

5.16 ORU-M Setting

5.16.3 ORU-M Password Setting

(1) Usage

Set the password to enter the ORU-M mode.

Note

- **ORU-M has to be enabled to select this setting. (The default is disabled.) To enable ORU-M, set DIPSW15-0: 1.**
- **This setting is valid when the DIPSW37-0=1.**

(2) Procedure

1. "Service Mode menu screen"
Press [15 ORU-M Setting].
2. "ORU-M Setting screen"
Press [03 ORU-M Password Setting].
3. "ORU-M Password Setting screen"
Press [New Password], then a keyboard screen appears. Enter new password (4 digits) using the alphanumeric keys and then press [OK].
4. Press [Input Confirmation], then a keyboard screen appears. Enter new password (4 digits) using the alphanumeric keys again and then press [OK].