

I ADJUSTMENT/SETTING


15. MECHANICAL ADJUSTMENT RU-509

15.2 Position adjustment of the shutter solenoid (SD5)

(1) Usage

Conduct this adjustment when replacing the shutter solenoid (SD5) or C12-97 occurs.

(2) Procedure

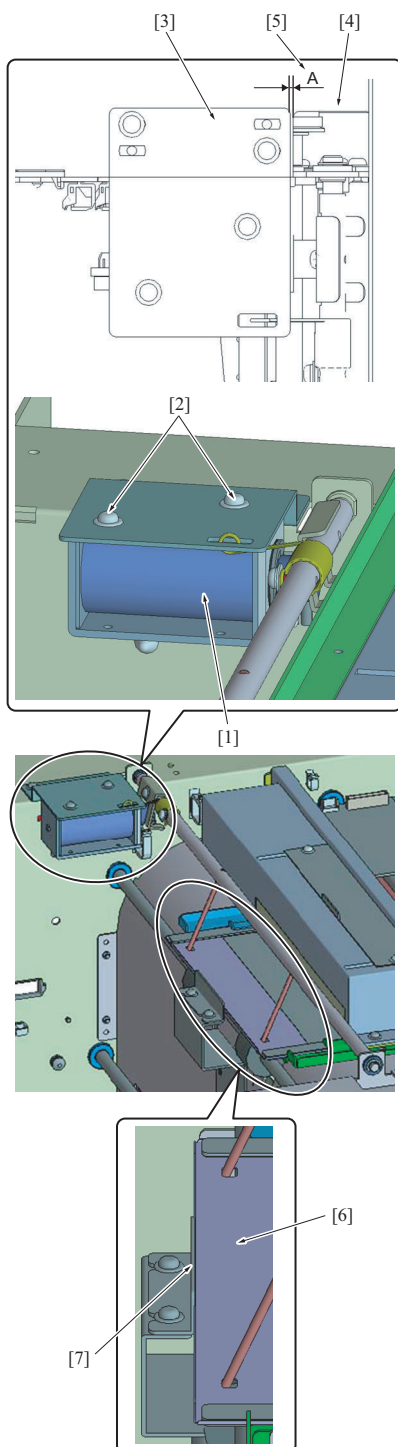

1. Remove the upper cover. (Refer to [G.6.3.4 Upper cover](#))
2. Loosen 2 screws [2] of the shutter solenoid (SD5) [1].
3. Measure the gap A [5] between the solenoid installation plate [3] and the framework [4]. Adjust it so that it obtains the standard value, and then tighten the screw [2].
Standard value: A = 0mm to 0.5mm
4. After adjusting, Turn ON the main body to enter the service mode and select [State Confirmation]- [I/O Check Mode]. Conduct the output code 69-50 to check that there is no gap between the shutter [6] and the stopper [7].